

Changing the Magazine for Glazing Points



1.



2.

The magazine must be removed, inverted and reinstalled to convert to glazing points.



3.



4.

GSAB