

## GLAZIERMASTER POINT DRIVER OPERATION & MAINTENANCE

### OPERATION

Your GlazierMaster is factory set for glazing points. Order #08-980 is available in boxes of 5,000.

### INSERTING GLAZING POINTS

1. To insert a stack of glazing points (A) pull follower knobs (B) up and rotate to the locked position. Figure 1.
2. Insert the points into the slot in the magazine (C) and release the follower knob so it can apply pressure to the stack of points. Figure 2.
3. Reload points when the follower knob reaches the RELOAD position (D). There are 100 points per pack.

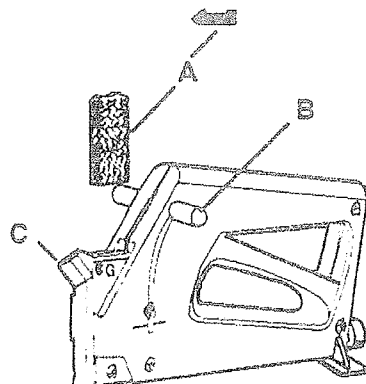


Figure 1

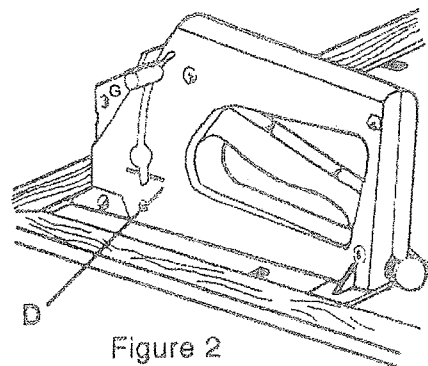


Figure 2

### PRESSURE ADJUSTMENT

The pressure adjustment (E) will affect the depth of penetration of the point in wood. Although factory settings accommodates most frames, the depth can be increased by turning the knob clockwise and decreased by adjusting it counterclockwise. Figure 3.

### GENERAL OPERATION

1. Back up the wood with a firm object to assure proper penetration of the point and avoid shocking the frame.
2. ALWAYS keep the magazine loading area free of foreign matter.

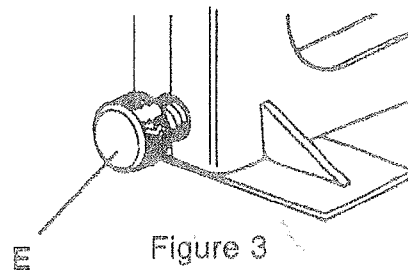


Figure 3



#### WARNING

Wear safety glasses when using this tool.

#### CAUTION

Do not operate the GlazierMaster unless the nose is against the wood, otherwise the point may injure you or someone nearby.

THE FLETCHER-TERRY COMPANY

65 Spring Lane, Farmington, CT 06032-3311 | 888.888.5165 | 860.677.7331 | Fax 860.676.8858 | [www.fletcher-terry.com](http://www.fletcher-terry.com)